



DorNotch Toolholders

NS R/L Threading & Grooving Toolholder- Style - External DorNotch Toolholder for threading and grooving DorNotch inserts

Inch Description	Part No. 733101- R.H. L.H.	A	B	C	D	E	F	Gage Insert	Seat	Seat Screw	Clamp	Clamp Screw
NSR/L06-2	58770 58771	0.375	0.375	2.500	0.138	0.750	0.562	NG-2R* NG-2L**	-	-	CM-74* CM-75**	S-310
NSR/L08-2J	58774 58775	0.500	0.500	3.500	0.138	0.750	0.750					
NSR/L10-2B	58778 58779	0.625	0.625	4.500	0.138	0.750	0.875					
NSR/L12-2B	58782 58783	0.750	0.750	4.500	0.138	0.750	1.000					
NSR/L16-2C	58786 58787	1.000	1.000	5.000	0.138	0.750	1.250					
NSR/L12-3A	58790 58791	0.750	0.750	4.000	0.210	1.250	1.000	NG-3R* NG-3L**	-	-	CM-72* CM-73**	S-412
NSR/L12-3B	58794 58795	0.750	0.750	4.500	0.210	1.250	1.000					
NSR/L16-3C	58798 58799	1.000	1.000	5.000	0.210	1.250	1.250					
NSR/L16-3D	58802 58803	1.000	1.000	6.000	0.210	1.250	1.250					
NSR/L20-3D	58806 58807	1.250	1.250	6.000	0.210	1.250	1.500					
NSR/L16-4C	58810 58811	1.000	1.000	5.000	0.294	1.380	1.250	NG-4R* NG-4L**	SM-420	SL-344-X	CM-72* CM-73**	S-412
NSR/L16-4D	58814 58815	1.000	1.000	6.000	0.294	1.380	1.250					
NSR/L20-4C	58818 58819	1.250	1.250	5.000	0.294	1.380	1.500					
NSR/L20-4D	58822 58823	1.250	1.250	6.000	0.294	1.380	1.500					
NSR/L24-4D	*58826 58827	1.500	1.500	6.000	0.294	1.380	1.750					

*Not standard stock item, call for lead time. For inserts see pages 45-48. For spare part see page 79. *For right hand tools. ** For left hand tools.


NE R/L Threading & Grooving Toolholder- Style - Gang External DorNotch Toolholder for threading and grooving DorNotch inserts

Right Hand Shown, Left Hand Opposite


Inch Description	Part No. 733101- R.H. L.H.	A	B	C	D	E	F	I	Gage Insert	Clamp	Clamp Screw
NER/L06-2	58900 58901	0.375	0.375	2.500	0.138	0.500	0.750	1.000	NG-2L* NG-2R**	CM-74* CM-75**	S-310
NER/L08-2J	58904 58905	0.500	0.500	3.500	0.138	0.500	0.750	1.000			
NER/L10-2B	58908 58909	0.625	0.625	4.500	0.138	-	0.750	1.000			
NER/L12-2B	58912 58913	0.750	0.750	4.500	0.138	0.500	1.000	1.000			
NER/L12-3B	58916 58917	0.750	0.750	4.500	0.210	0.750	1.125	2.000	NG-3L* NG-3R**	CM-72* CM-73**	S-412
NER/L16-3D	58920 58921	1.000	1.000	6.000	0.210	0.750	1.250	2.000			
NER/L20-3D	58924 *58925	1.250	1.250	6.000	0.210	0.750	1.500	2.000			
NER/L16-4D	58928 58929	1.000	1.000	6.000	0.294	0.750	1.375	2.000	NG-4L* NG-4R**	CM-72* CM-73**	S-412
NER/L20-4D	58932 58933	1.250	1.250	6.000	0.294	0.750	1.625	2.000			


*Not standard stock item, call for lead time. For inserts see pages 45-48. For spare part see page 79. *For right hand tools. ** For left hand tools.

NR R/L Grooving Gang Toolholder- Style - Corner Grooving External DorNotch Toolholder for grooving DorNotch inserts

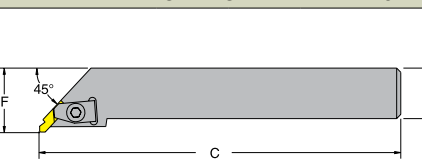

Right Hand Shown, Left Hand Opposite

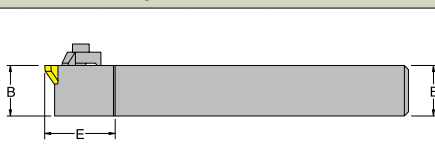


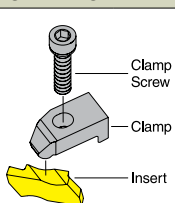

Clamp Screw

Clamp

Insert

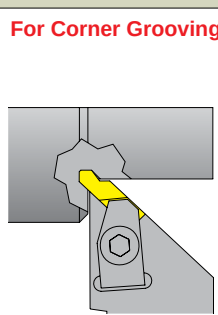

Inch Description	Part No. 733101- R.H. L.H.	A	B	C	E	F	Gage Insert	Clamp	Clamp Screw
NRR/L12-3B	58942 *58943	0.750	0.750	4.500	1.250	1.000	*NG-3L **NG-3R	*CM-73 **CM-72	S-412
NRR/L16-3C	*58944 58945	1.000	1.000	5.000	1.250	1.250			
NRR/L16-3D	58946 *58947	1.000	1.000	6.000	1.250	1.250			
NRR/L20-3D	58948 58949	1.250	1.250	6.000	1.375	1.500			
NRR/L24-3D	58950 58951	1.500	1.500	6.000	1.375	2.000			

* Not standard stock item, call for lead time. For inserts see pages 45-48. For spare part see page 79. *For right hand tools. ** For left hand tools.