





ADNR R/L Toolholder Style R - Corner grooving external DorNotch toolholder for grooving DorNotch inserts


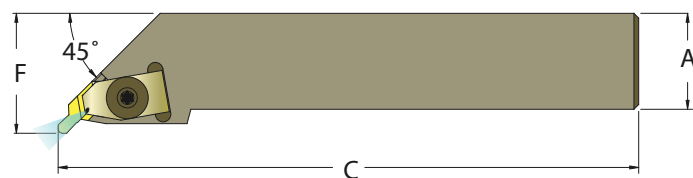


For Corner Grooving

Jet-Stream™ Thru Coolant

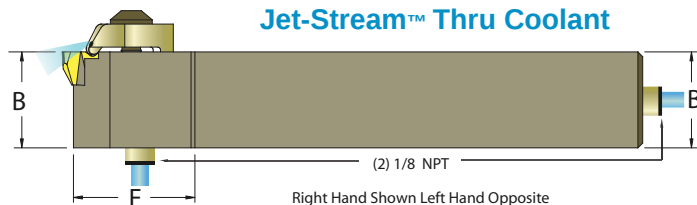

Right Hand Shown Left Hand Opposite
Right Hand Tool Uses Left Hand Insert

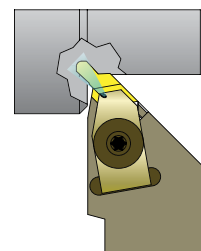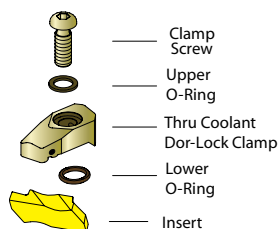


Inch Description	Part No. 733101-		A	B	C	D	E	F	Gage Insert	Seat	Seat Screw	Dor-Lock Clamp	Clamp Screw	Upper 'O' Ring	Lower 'O' Ring
	R.H.	L.H.													
ADNRR/L12-3B	53480	53481	0.75	0.75	4.50	0.14	1.25	1.00	* NU-3L ** NU-3R	N/A	N/A	* JSLC-HP73 ** JSLC-HP72	JSCS-04	JSOR-01	JSOR-04
ADNRR/L16-3D	53482	53483	1.00	1.00	6.00	0.14	1.25	1.25							
ADNRR/L20-3D	53484	53485	1.25	1.25	6.00	0.14	1.38	1.50							

For inserts see pages 45-48. For spare part see page 80.






* For right hand holder ** For left hand holder

AS-ADNE R/L Boring Bar Style E- Internal DorNotch Boring Bar for threading and grooving DorNotch inserts

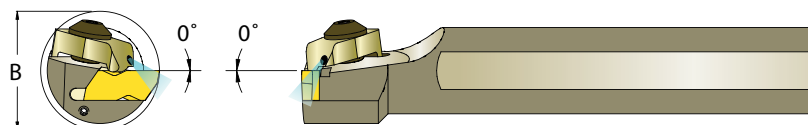

Right Hand Shown Left Hand Opposite
Right Hand Tool Uses Left Hand Insert

Jet-Stream™ Thru Coolant

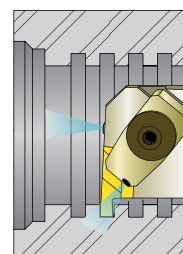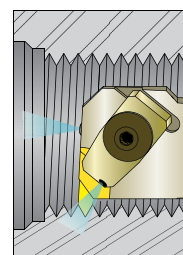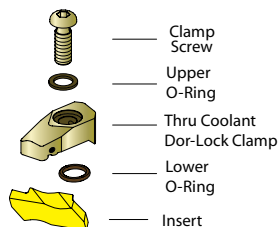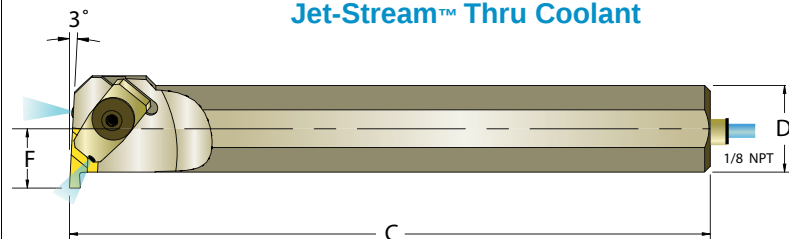

Inch Description	Part No. 733101-		B	C	D	F	Gage Insert	Seat	Seat Screw	Dor-Lock Clamp	Clamp Screw	Upper 'O' Ring	Lower 'O' Ring	Chip Flush Plug
	R.H.	L.H.												
AS-16R-ADNER/L-3	53490	53491	1.38	8.00	1.00	0.69	* NG-3L ** NG-3R	N/A	N/A	* JSLC-HP73 ** JSLC-HP72	JSCS-04	JSOR-01	JSOR-04	JSPN-M6
AS-20S-ADNER/L-3	53492	53493	1.75	10.00	1.25	0.88								
AS-24S-ADNER/L-3	53494	53495	2.00	10.00	1.50	1.00								
AS-32T-ADNER/L-4	53496	53497	2.75	12.00	2.00	1.38	** NG-4R * NG-4L	N/A	N/A	* JSLC-HP77 ** JSLC-HP76	JSCS-04	JSOR-01	JSOR-04	JSPN-M6

For inserts see pages 45-48. For spare part see page 80.

* For right hand holder ** For left hand holder